

# RolliBox™



**Conversions without limits**



# RolliBox™

---

## → FLEXIBLE TRANSPORTATION SYSTEM

### **Alfred Bekker & Schnierle**

Alfred Bekker API, in conjunction with Schnierle present the RolliBox™; a revolutionary wheelchair and passenger transport system allowing multiple combinations of wheelchairs, seated passengers and stretcher positions all within the same vehicle.

The RolliBox™ allows up to 4 wheelchairs, 7 passengers or any combination in between to be transported. All of the equipment remains in the vehicle and the seats can be adjusted to allow for greater leg room.

The RolliBox™ can be purchased exclusively from Alfred Bekker in the UK.

#### RolliBox™ Benefits:

- Transport 4 Wheelchairs, 7 Passengers, Stretcher or any combination in between
- Equipment stays in the vehicle
- Wheelchairs have headrest and three point seat belt
- Placement of wheelchair secures can be individually adjusted
- Adjustable sliding seats
- Fully TÜV SÜD tested for a variety of vehicles



## Available For Vehicles:

FRT	Ford Transit	Medium & Large
FID	Fiat Ducato	Large
PEB	Peugeot Boxer	Large
CIR	Citroen Relay	Large
REM	Renault Master	Medium & Large
VXM	Vauxhall Movano	Medium & Large
MES	Mercedes Sprinter	Medium, Large & Extra Large
VVC	Volkswagen Crafter	Medium, Large & Extra Large

Please note:

The Medium Sprinter/Crafter, Movano/Master and Transits have 5 seat RolliBox™ capacity in the rear.

# RolliBox™

## → FLEXIBLE TRANSPORTATION SYSTEM


### Seated Transport

This configuration allows passengers to transfer into the vehicle through side or rear access. The seats tip and fold into the side of the vehicle, allowing for more space for staff members or luggage.

There is no requirement to remove the seats, as they can slide to allow for more leg room. Each seat comes with a 3-point seat belt, head rest and Isofix points.

The typical RolliBox™ kit would allow for 4 passengers to be sat at the off-side and 3 passengers at the near side. A wheelchair pen and attendant seat can be added for extra flexibility within the vehicle.



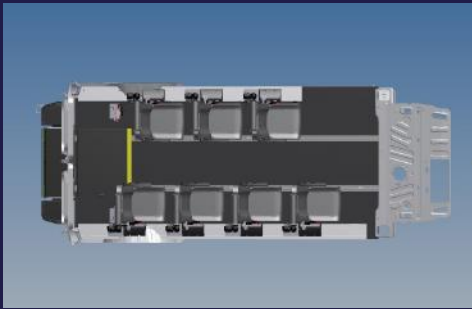

Fully seated (above & left), 4 Seats (right)

# RolliBox™

## → FLEXIBLE TRANSPORTATION SYSTEM

### Wheelchair Transport



The standard RolliBox™ system can transport up to 4 wheelchairs using 4-point tie downs, headrests and 3-point seatbelts. All equipment is kept secure within the vehicle allowing it to be prepared for any eventuality and also reducing damage or loss.

For wheelchair access, the conversion can be adapted to suit a tail lift, wedge or aluminium ramp, depending on the preferences of frontline staff.

The headrests and 3-point belts from the seats are used for the wheelchair user, with securing them into position being quick and easy. This allows the passenger to be comfortable and safe with the journey, with minimum stress.

The wheelchair capacity for smaller vehicles such as the Ford Transit L2 and Mercedes Sprinter L2 could be reduced depending on the specification.



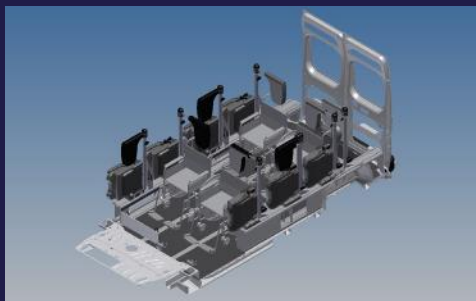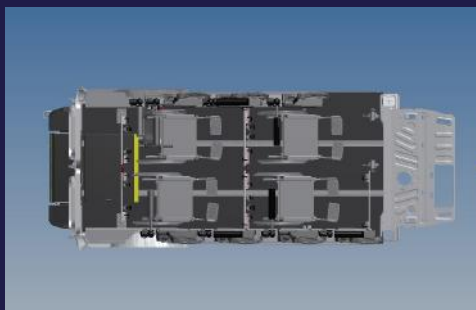

Full wheelchair (above & left) 2 wheelchairs, 4 seats (right)

# RolliBox™

## → FLEXIBLE TRANSPORTATION SYSTEM

### The Stretcher



The conversion by Alfred Bekker allows a stretcher to be integrated with the RolliBox™ system. This means that when the stretcher is not in use the vehicle can return to standard passenger and wheelchair transport.

The specification can be adapted to allow for a bariatric stretcher, if required. This would be completed by removing one side of RolliBox™ tracking and placing fixed tip and fold seats.

The conversion can be configured to below 3.5t (depending on vehicle and specification) to allow for more staff to be eligible to drive. A standard specification for patient transport can include: storage compartments, wheelchair storage, heating/air-conditioning, rear access lifts/ramps and oxygen tanks.





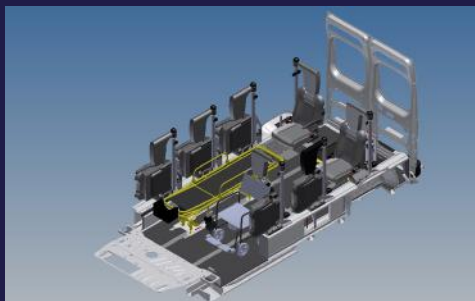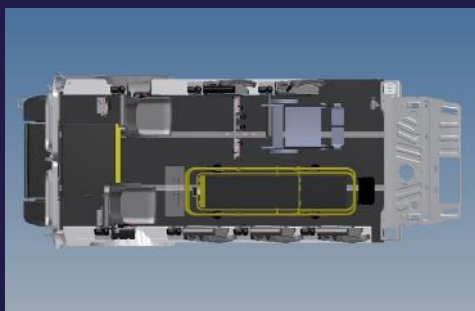

Stretcher, wheelchair & 2 seats (above & left), stretcher, wheelchair & 3 seats (right)

# RolliBox™

## → FLEXIBLE TRANSPORTATION SYSTEM

### Available Seating Layouts

#### Medium Vehicles:

Ford Transit, Renault Master, Vauxhall Movano,  
Mercedes Sprinter & Volkswagen Crafter

5 seats & 0 wheelchair places  
4 seats & 1 wheelchair place  
3 seats & 2 wheelchair places  
0 seats & 2 wheelchair places

#### Large Vehicles:


Ford Transit, Fiat Ducato, Peugeot Boxer, Citroen  
Relay , Renault Master, Vauxhall Movano,  
Mercedes Sprinter & Volkswagen Crafter

7 seats & 0 wheelchair places  
5 seats & 1 wheelchair place  
4 seats & 2 wheelchair places  
2 seats & 3 wheelchair places  
0 seats & 4 wheelchair places

## Extra Long Vehicles:

Mercedes Sprinter & Volkswagen Crafter

- 8 seats & 0 wheelchair places
- 7 seats & 1 wheelchair place
- 6 seats & 2 wheelchair places
- 5 seats & 3 wheelchair places
- 4 seats & 4 wheelchair places
- 0 seats & 6 wheelchair places

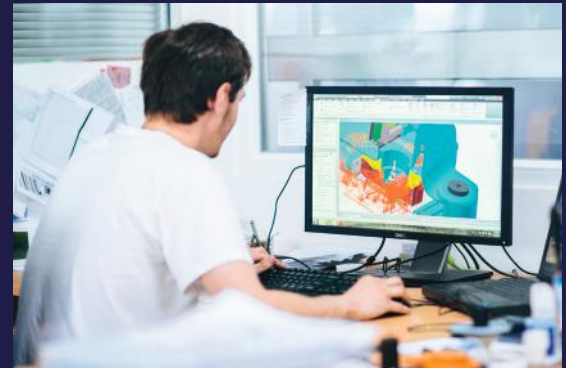



- **COMPREHENSIVE DEVELOPMENT**
- **TÜV SÜD TESTED**
- **PRECISE PRODUCTION**
- **CUSTOMER SUPPORT**





**alfredbekker.com**  
**ALFRED BEKKER API LTD**

Kelleythorpe Industrial Estate,  
Driffield East Yorkshire,  
YO25 9DJ  
T: +44 (0)1377 241700  
F: +44 (0)1377 241767  
E: [info@alfredbekker.com](mailto:info@alfredbekker.com)  
**[www.alfredbekker.com](http://www.alfredbekker.com)**



All pictures and illustrations shown are for reference purposes only. All information, specifications and illustrations are based on the latest information available at the time of publishing. Alfred Bekker API Ltd reserves the right to make changes at any time without notice. © 2016 Alfred Bekker API Ltd.

